



| TOUCHE PROGRAMME | SENS (sensibilité) | COOK (temps de cuisson) | SHAKE (secouage produit) | HOLD (durée de vie produit) | REMARQUES |
|------------------|--------------------|-------------------------|--------------------------|-----------------------------|---------------|
| L | 0 | 0 | 0 | 0 | |
| 1 | 5 | 3.30 Minutes | 0 | 0 | FRITES |
| 2 | 0 | 0 | 0 | 0 | |
| 3 | 0 | 0 | 0 | 0 | |
| 4 | 0 | 0 | 0 | 0 | |
| 5 | 0 | 0 | 0 | 0 | |
| 6 | 5 | 3.30 Minutes | 0 | 0 | FRITES |
| 7 | 0 | 0 | 0 | 0 | |
| 8 | 0 | 0 | 0 | 0 | |
| 9 | 0 | 0 | 0 | 0 | |
| 0 | 0 | 0 | 0 | 0 | |
| R | 0 | 0 | 0 | 0 | |

TEMPERATURE 180°C