


I-ICE MACHINES
 SELF-CONTAINED 1 PHASE
 CAUTION: DISCONNECT POWER BEFORE WORKING
 ON ELECTRICAL CIRCUITRY.

SEE SERIAL PLATE FOR VOLTAGE

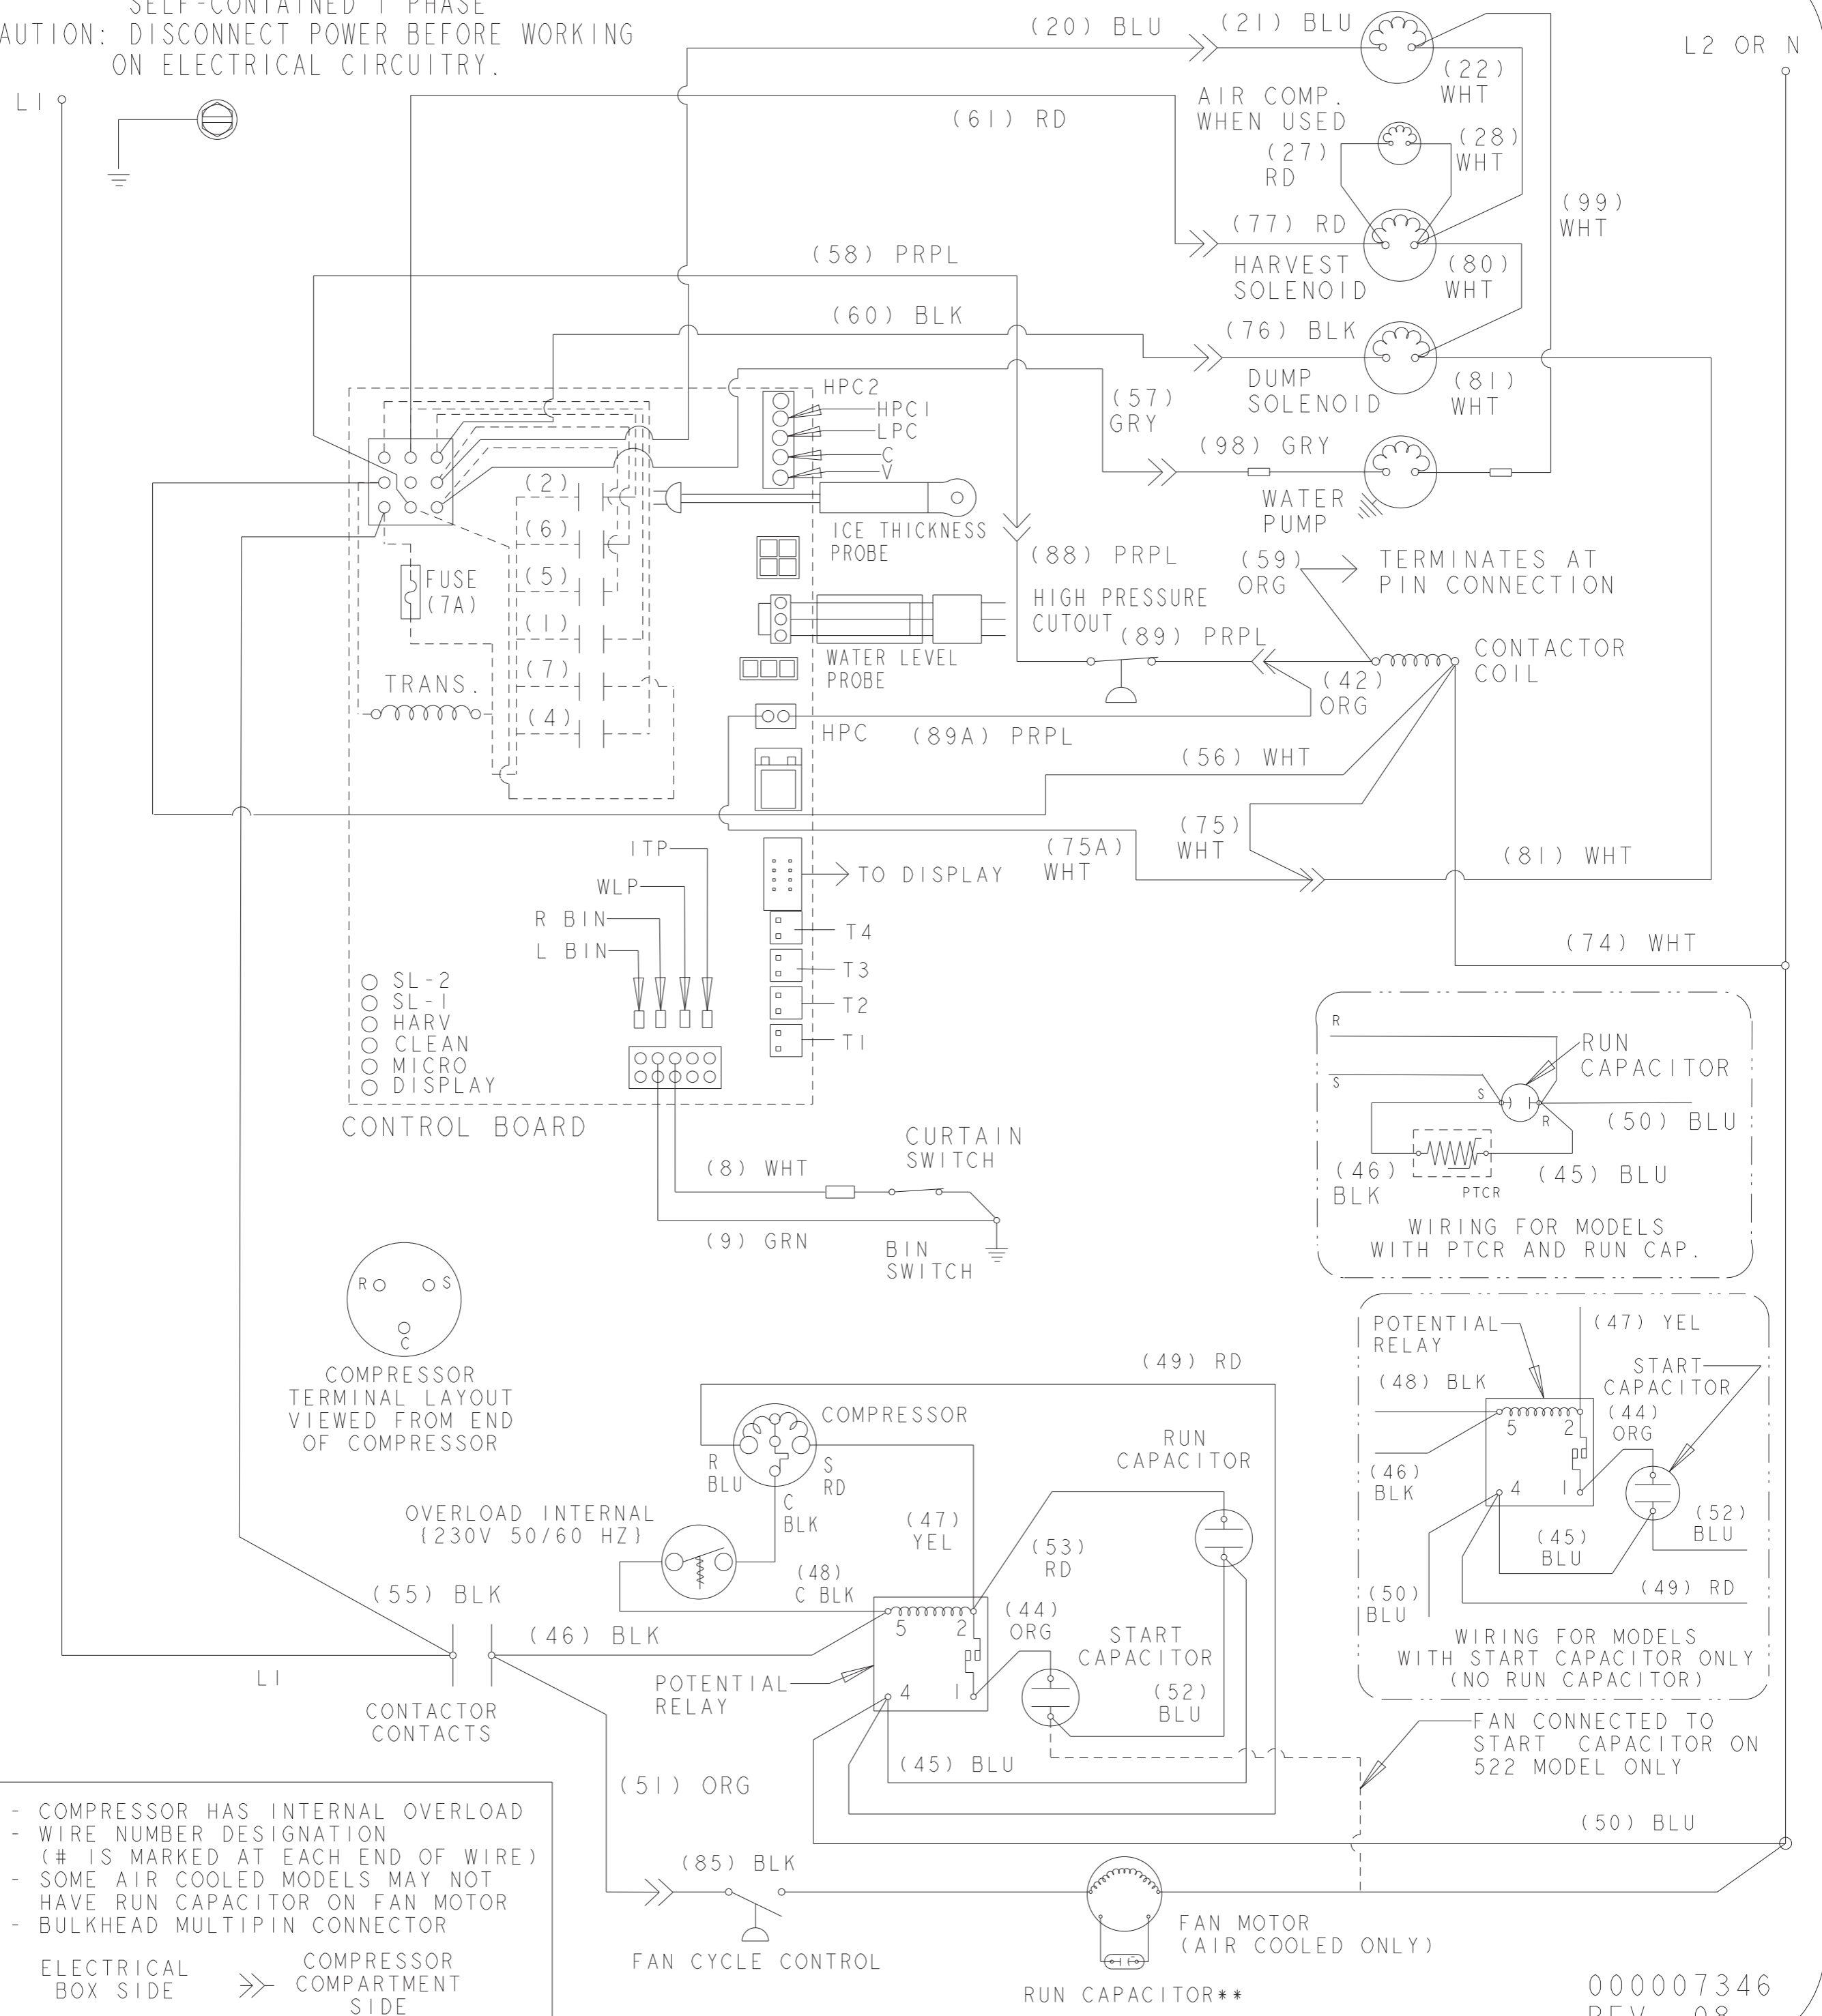

- * - COMPRESSOR HAS INTERNAL OVERLOAD
 - () - WIRE NUMBER DESIGNATION
 (# IS MARKED AT EACH END OF WIRE)
 - ** - SOME AIR COOLED MODELS MAY NOT
 HAVE RUN CAPACITOR ON FAN MOTOR
 - - BULKHEAD MULTIPIN CONNECTOR
- ELECTRICAL BOX SIDE ➤ COMPRESSOR COMPARTMENT SIDE